



## Dektite® installation instructions




1  
Cut Dektite® cone where indicated for the relevant pipe size

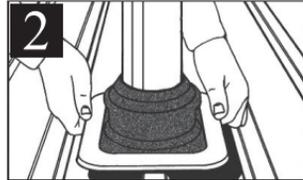


2  
Slide Dektite® flashing down over pipe. Water can be used as a lubricant

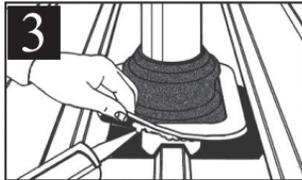


3  
Apply neutral cure silicone sealant on underside of flange

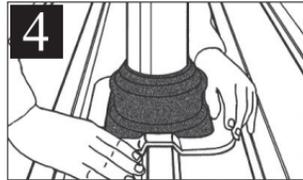

4  
Press pipe flashing into contours of roof panel

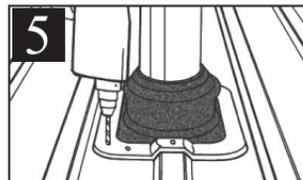

5  
Fasten flashing to surface with self-tapping or self drilling screws; or selected pop rivets

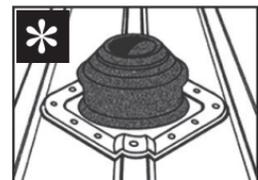

\*  
Use a Dektite® on the 'diamond' or bias for enlarged holes and penetrations on steep pitched roofs or deep contours

